



MASTER

Water Conditioning Corp.

www.masterwater.com

Installation and Operation Manual



MBA Crawl Space Filters with the 255/742 Logix Control Valve

July 2015

Installation and Operating Instructions for
253/742 Logix
Top Mount Crawl Space Filters

Model #:

_____	MBA-AC-10CS	Carbon Filter
_____	MBA-AN-10CS	Acid Neutralizer
_____	MBA-FE-10CS	Iron Filter
_____	MBA-S-10CS	Turbidity Filter
_____	MBA-AC-1040	Carbon Filter
_____	MBA-AN-1040	Acid Neutralizer
_____	MBA-FE-1040	Iron Filter
_____	MBA-AN-1229	Acid Neutralizer


Shipping Carton Description / unit:

	Contents	Description	# Cartons
	Mineral Tank	Distributor pipe Installed	1
	253/742 Logix Control Valve	253/742 Timer and 256 bypass with ¾" pvc or copper connections	1
Unit			
MBA-AC-10CS	Carbon	Carbon in one ½ CF Box & one CF Box	1
MBA-AN-10CS	NS Mix	NS Mix in one ½ CF Box	1
MBA-S-10CS	Filter Ag Plus	Filter Ag Plus in one ½ CF Box	1
MBA-AC-1040	Carbon	Carbon in one 1 CF Box & one CF Box	1
MBA-AN-1040	Calcite	Calcite in one ½ CF Box	1
	NS Mix	NS Mix in one ½ CF Box	1
MBA-FE-1040	Greensand Plus	Greensand Plus in one 1 CF Box	1
MBA-AN-1229	Calcite	Calcite in ½ CF Boxes	1
	NS Mix	NS Mix in ½ CF Boxes	1

**ALL UNITS NOW COME WITH THE NEW VORTECH
* NO GRAVEL IS NEEDED**

NOTE: Product Change for MBA-AN-1229 ACID NEUTRALIZER

The brine plug (1030334) was added, and the brine sight glass connection is plugged with a red cap (TV-6A Red Cap). See Figure below. DO NOT REMOVE CAPS OR PLUGS.

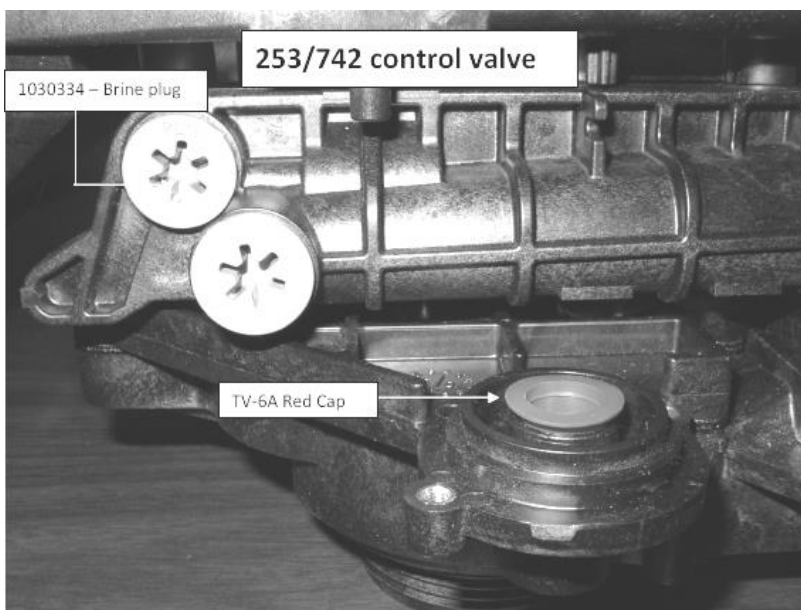

NOTE: THIS FILTER IS NOT INTENDED TO BE USED FOR TREATING WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION WHETHER BEFORE OR AFTER THE SYSTEM

System Description:

The filter tank has a Logix top mounted automatic control valve with an electronic time clock to initiate regeneration. The Logix Valve is constructed of non-corrosive Noryl® material and is rated at a maximum working water pressure of 100 psi. It uses a 742 microprocessor based timer to actuate regeneration in the following ways:

- a. Manual regeneration button to start an emergency regeneration
- b. Regeneration day setting

Filter Positioning:

1. Place Filter in desired position, far enough from walls and other obstructions to allow for servicing the unit.
2. Place the Filter within reasonable access to a grounded 115V/60 HZ circuit and a legal drain line connection.

Filter Tank Loading:


1. Remove yellow caplug from top of tank. DO NOT CUT white riser tube. Tube was prefitted at the factory.
2. The distributor is permanently attached to the vortech----centering is not necessary. The top of the distributor will extend above the top of the tank (this was prefitted at the factory).
3. Cover the top opening of the distributor pipe before filling the tank with media.
4. Pour all filter media provided with the unit into the top of the tank. See page one for your specific model number of unit to determine the amount of media to load into the mineral tank.
5. Remove the material used to cover the top opening of the distributor pipe.

Logix Control Valve:

1. When facing the front of the Logix timer, the inlet connection (**Figure 1**) is located on the left and the outlet connection is on the right. The control valve's inlet and outlet connections are either 3/4" copper or PVC equipped with gasket and nut.

Figure 1

Left Side Right Side

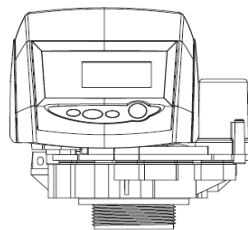


Install the 256 bypass valve (**See Figure 2**) with inlet and outlet handles facing upward. Place gasket into nut and secure 3/4" copper

or PVC tail piece with a nut. Repeat the procedure for the outlet connection.

DO NOT OVERTIGHTEN THE NUT.

Figure 2

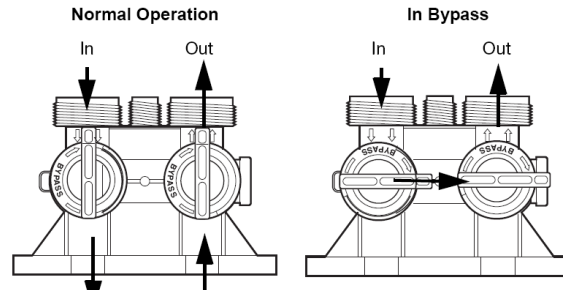

2. The control valve's drain connection is 1/2" npt and is located on the back of the bypass valve.
3. Turn the control valve upside down and ensure that the control valve distributor o'rings are in place. Use silicone lubricant on the o'rings.
4. Fill mineral tank with water before installing control valve.
5. Place the control valve onto the distributor pipe.
6. Thread the control valve hand tight to 20 foot pounds!

DO NOT OVERTIGHTEN!


****DO NOT USE PETROLEUM!****

****USE ONLY SILICONE ****

Service and Drain Piping:

1. Pipe Filter into the service lines .The inlet and outlet connections of the control valve are 3/4" copper or PVC and are located on the back of the valve body. As you face the timer the inlet is on the left and the outlet is on the right. Always follow local plumbing codes when installing our water treatment equipment.
2. If sweat fittings are used, be sure soldering is done in such a manner as not to allow heat to reach the control valve or bypass. (If Schedule 80 PVC is used make sure to follow the proper primer and solvent instructions.)
3. The drain line connection is located on the back of the bypass valve as you face the timer. It is recommended you install a 1/2" union on the drain line for servicing. The drain line must be of adequate size to allow for full regeneration flow.

Figure 3

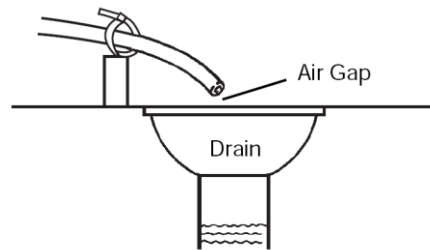

- The control valve drain connection is 1/2" npt.
- Never decrease the drain piping size to below 1/2"
- Maximum drain line length is 20 feet.
- Maximum drain line height is 6 feet above the control valve.
- The drain line must be piped to an open air gap (See Figure 3)
- Always follow local plumbing codes.




WARNING: Never insert drain line directly into a drain, sewer line or trap (Figure 8). Always allow an air gap between the drain line and the wastewater to prevent the possibility of sewage being back-siphoned into the conditioner.



224 Shoemaker Rd.
Pottstown, PA 19464

Typical Piping Layout

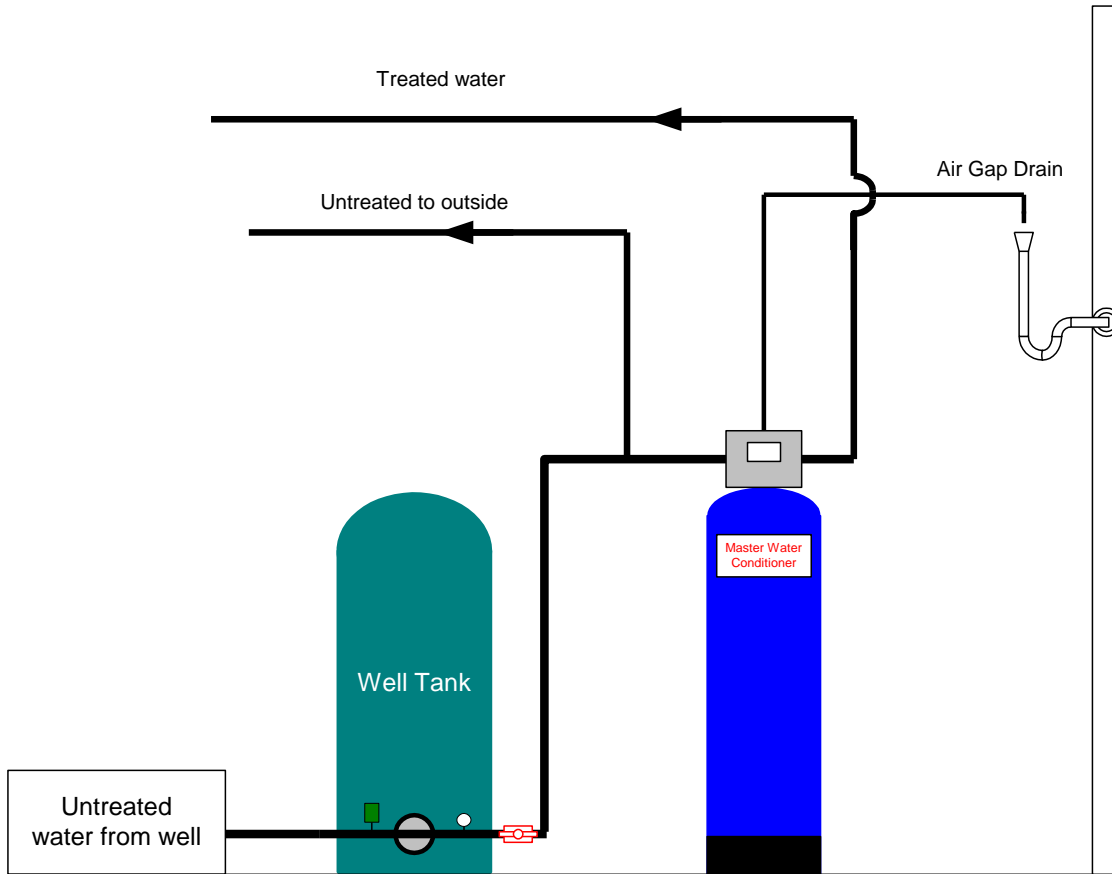

NOTE: All Master Water Conditioners must be installed after the well tank or water meter if its public water supply.

Electrical Requirements:


Always follow all local electrical codes when installing our water treatment equipment.

1. Provide an 120v/60Hz properly grounded dedicated electrical Outlet. (It's very important that the polarity be correct)
Avoid using outlets that are switch controlled.
2. Maximum amperage required is 5 amps.

3. Make sure the electrical service provides power 24 hours per day. We recommend installing a **surge protector** to protect unit from power surges, which are not covered by warranty.

Logix Control Valve Electrical Connection:

Note: Do not touch the wiring harness between the Logix timer and the motor, it’s positioning is critical and therefore already installed at the factory.

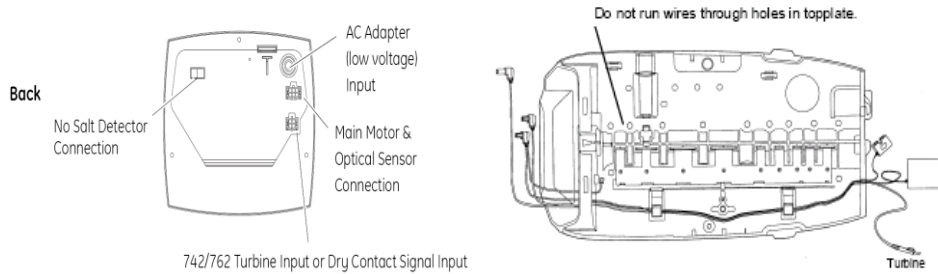

1. Remove plastic control valve cover by spreading sides while lifting.
2. Plug transformer into back of timer following existing wires.
3. Plug transformer into a properly grounded 120V/60 HZ electrical outlet.
4. The screen will now display “253” then the “Time of Day”.

Filling Filter with Water:

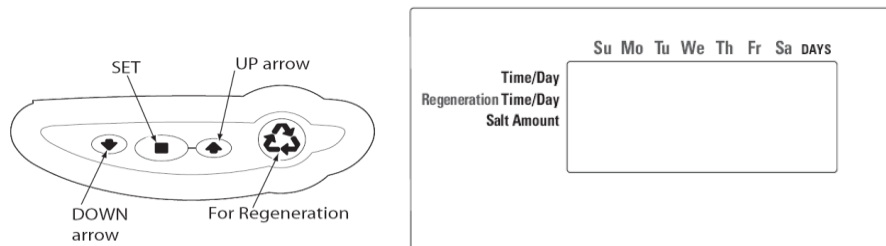


Figure 4

1. Push the FOR REGENERATION button (**Figure 4**) on the controller down for 5 seconds. This will initiate a manual regeneration. You will notice a flashing hour glass during regeneration. The controller will indicate that the motor is turning the camshaft

to cycle C1 (BACKWASH). The controller will indicate the total regeneration time remaining. Filling tank in this position allows air to escape from drain.

Open the bypass inlet valve ¼ turn and allow water to flow into the mineral tank at a slow rate.

Warning: IF WATER ENTERS THE TANK TOO FAST, ALL THE MEDIA WILL BE FLUSHED TO DRAIN DURING START UP.

2. When water is running steadily at the drain, open the bypass valve's inlet and outlet to their maximum position.

Simultaneously press the SET and UP buttons on the controller for 1 second then release, the motor will advance the cam to C2. Once C2 is displayed simultaneously press the SET and UP buttons on the controller for 1 second then release, the motor will advance the cam to C3. Repeat this procedure until the timer enters the C7 (FAST RINSE) position. The filter will go through the rinsing cycle and then automatically advance to (REGENERATION COMPLETE) C0 and Time of Day will be displayed. This is treated water.

Regeneration Cycles:

- C1 – Backwash
- C2 – Regeneration Draw/Slow Rinse (not used in filter mode)
- C3 – Slow Rinse (not used in filter mode)
- C4 – System Pause (to repressurize tank)
- C5 – Fast Rinse cycle 1
- C6 – Backwash cycle 2 (not used in filter mode)
- C7 – Fast Rinse cycle 2 (not used in filter mode)
- C8 – Regenerant Refill (not used in filter mode)

Logix Control Valve Timer Settings:

Note: The control valve is preset at the factory. You only need to set the time of day and number of days to regenerate, which is preset at 1 am.

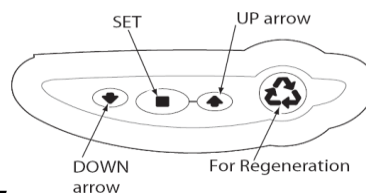


Figure 5

Time of Day Setting

- 1) Press the SET button. The screen will show the Time of Day in blinking numbers.
- 2) To change the Time of Day, use the UP or DOWN arrows.
- 3) Press the SET button.

Day of Week Setting

- 1) Press the SET button. The screen will show the Day of Week in blinking triangle.
- 2) To change the Day of Week, use the UP or DOWN arrows.
- 3) Press the SET button.

Time of Regeneration Setting (the factory default is 1 AM)

- 1) Press the SET button. The screen will show the Time of Regeneration in blinking numbers.
- 2) To change the Time of Regeneration, use the UP or DOWN arrows.
- 3) Press the SET button.

Regeneration Frequency Setting (the factory default is 7)

- 1) Press the SET button. The screen will show the Regeneration frequency in blinking numbers.
- 2) To change the number, use the UP or DOWN arrows.
- 3) Press the SET button.

If you wish to regenerate on certain days of the week, do the following:

- a. First, do steps above, but set at zero.
- b. Press SET button until you reach the day you wish to regenerate.
- c. Press the UP or Down arrows to set the day.
- d. Press the SET button to lock the day in.
- e. Repeat process to select the next day of regeneration.

NOTE: The days of Regeneration will be highlighted on the screen.

Final Check:

1. Inspect the treated water to assure that the media fines (color) have been flushed from the unit. Make sure the drain line

connection meets all plumbing codes and that the drain line size can handle the backwash flow rate of the filter.

2. Make sure the Inlet and Outlet on bypass valve are open.
3. Make sure the control valve timer is plugged into an electrical outlet with power 24 hours per day.
4. Check all piping for leaks.

Troubleshooting

Symptom: Water conditioner fails to regenerate. Dirty water.

Possible Cause	Solution
Power supply to 742 control has been interrupted.	Determine reason for power interruption and correct. Reset time of day.
Water pressure lost.	Restore water pressure.
Corrupted programming of 742 Logix timer.	Reprogram timer assembly.
Defective 742 Logix timer.	Replace timer assembly.
Manual bypass valve is open.	Close manual bypass valve.
Leak at riser pipe seal.	Insure that riser pipe is properly sealed at o'ring seal. Inspect pipe for cracks.

Symptom: Loss of Media to Drain

Possible Cause	Solution
No flow control installed in drain line.	Install drain line flow control.

Symptom: Leak to Drain

Possible Cause	Solution
No flow control installed in drain line.	Install drain line flow control.
Insufficient water pressure.	Increase water pressure above 25 psig (172kPa) minimum.
Damaged valve disk or obstruction in valve disk.	Inspect and if damaged, replace all valve disks or remove obstruction.

Symptom: Loss of Water Pressure


Possible Cause	Solution
Fouled filter media bed due to iron accumulation.	Clean control valve and rebed mineral tank with new media.
Slots in riser pipe or laterals are filled with media fines.	Inspect and clean distributor pipe slots as needed.

TROUBLESHOOTING

700 Series Controller Troubleshooting

Problem	Possible Cause	Solution
ERR 1 is displayed	Controller power has been connected and the control is not sure of the state of the operation.	Press the UP arrow and the control should reset.
ERR 2 is displayed	Controller power does not match 50 or 60 Hz.	Disconnect and reconnect the power. If problem persists, obtain the appropriate controller or AC adapter for either 50 or 60 Hz power.
ERR 3 is displayed	Controller does not know the position of the camshaft. Camshaft should be rotating to find Home position.	Wait for two minutes for the controller to return to Home position. The hourglass should be flashing on the display indicating the motor is running.
	Camshaft is not turning during ERR 3 display.	Check that motor is connected. Verify that motor wire harness is connected to motor and controller module. Verify that optical sensor is connected and in place. Verify that motor gear has engaged cam gear. If everything is connected, try replacing in this order: <ul style="list-style-type: none"> –Wire harness –Motor –Optical sensor –Controller
	If camshaft is turning for more than five minutes to find Home position:	Verify that optical sensor is in place and connected to wire. Verify that camshaft is connected appropriately. Verify that no dirt or rubbish is clogging any of the cam slots. If motor continues to rotate indefinitely, replace the following components in this order: <ul style="list-style-type: none"> –Wire harness –Motor –Optical sensor –Controller
Four dashes displayed: -- : --	Power failure occurred	Press SET to reset the time display.

255 VALVE EXPLODED VIEW

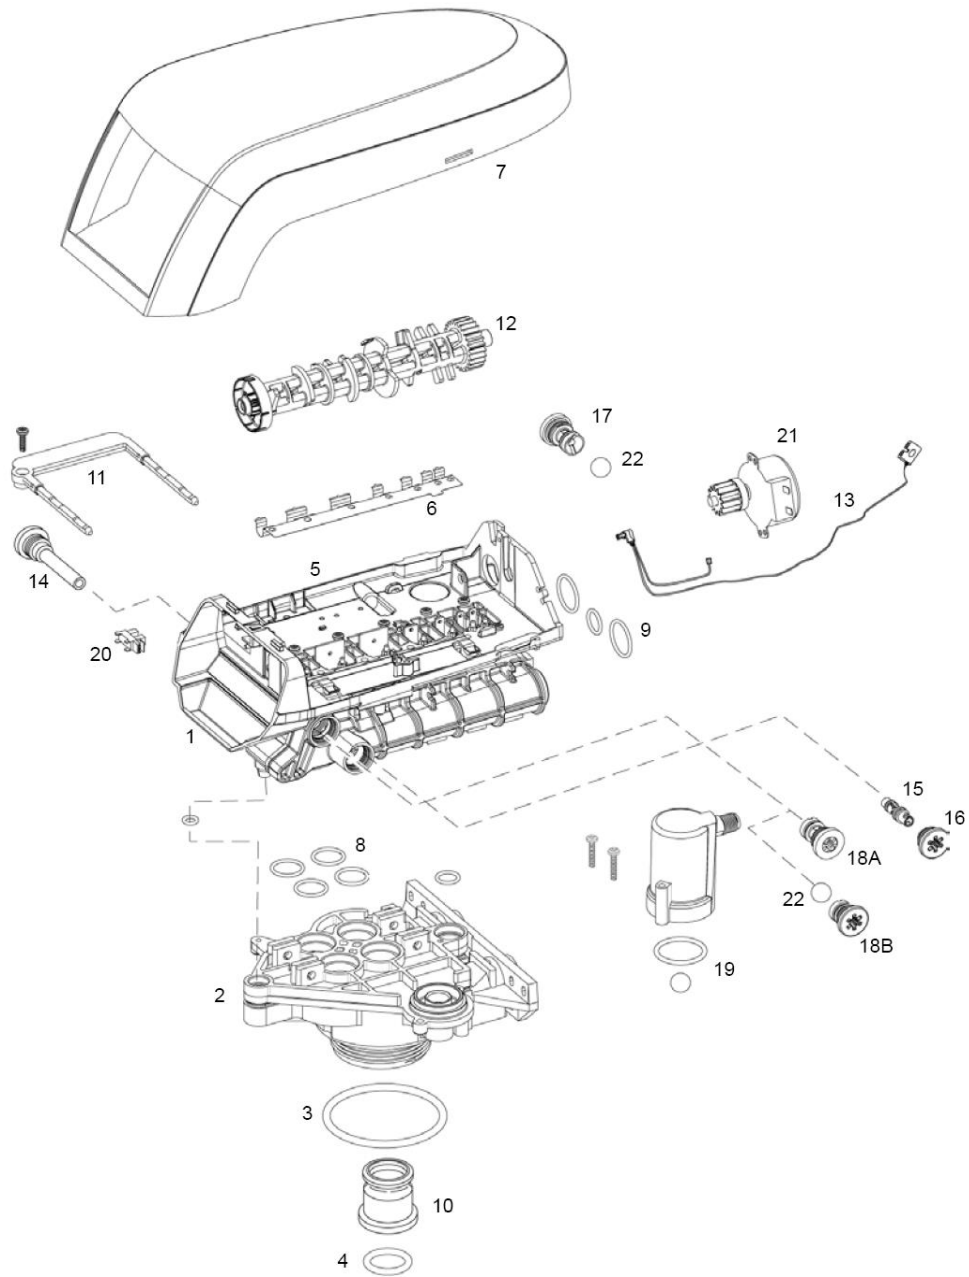


*Warning: Do not use flow control ball with #18A.

255 VALVE PARTS LIST


Part				Part			
Code	No.	Description	Qty.	Code	No.	Description	Qty.
1	1000232	255 Valve Assembly, w/o Flow Controls	1	14	1000226	Screen/Cap Assembly w/ O-Ring	1
2	1033784	255 Tank Adapter New Style	1	15		Injector (High Efficiency) Options	1
3	1010429	O-Ring BN	1	1030408		"E" Injector (High Efficiency) - Yellow	
4	1010428	O-Ring EP	1	1030409		"F" Injector (High Efficiency) - Peach	
5	1235340	Top Plate, 255 Valve, 700/860 Series Controller	1	1030410		"G" Injector (High Efficiency) - Tan	
6	1235341	Spring, One Piece, 255 Valve	1	1030411		"H" Injector (High Efficiency) - Lt Purple	
7	1236246*	Cover, Valve, 255/Performa, 700/860 Series Controller	1	1030412		"J" Injector (High Efficiency) - Lt Blue	
8	1001404	O-Ring Group: Tank Adapter	1	1030413		"K" Injector (High Efficiency) - Pink	
9	1040459	O-Ring Group: Piping Boss	1	1035736		"L" Injector (High Efficiency) - Orange	
10	1001986	13/16 inch Rubber Insert (Optional)	1	1035737		"M" Injector (High Efficiency) - Brown	
*	1000250	Valve Disk Kit - Standard	1	1035738		"N" Injector (High Efficiency) - Green	
*	1041196	Blending Valve Kit 900/700 Series Top Plate	1	1035739		"Q" Injector (High Efficiency) - Purple	
11		Locking Bar	1	1035884		"R" Injector (High Efficiency) - Dark Gray	
	1031402	English Language Locking Bar		16	1000269	Injector Cap with O-Ring	1
	1031403	French Language Locking Bar		17		Drain Control Assembly with O-Ring	1
	1031404	German Language Locking Bar			1000209	No. 7 (1.2 gpm; 4.5 Lpm)	
	1031405	Italian Language Locking/Bar			1000210	No. 8 (1.6 gpm; 6.1 Lpm)	
	1031406	Japanese Language Locking Bar			1000211	No. 9 (2.0 gpm; 7.6 Lpm)	
	1031407	Spanish Language Locking Bar			1000212	No. 10 (2.5 gpm; 9.5 Lpm)	
	1006093	Locking Bar Screw - No. 8-9/16 inch			1002130	No. 12 (3.5 gpm; 13.2 Lpm)	
12		Camshaft Options	1		1000214	No. 13 (4.1 gpm; 15.5 Lpm)	
	1235353	Cam 255/700-860 Series Valve, STD, Black			1000215	No. 14 (4.8 gpm; 18.2 Lpm)	
	1236251	Cam 255/700-860 Series Valve, TWIN, Tan (insert)		18A	1000222	Regenerant Refill Controller, No Ball	1
13	1235269	Motor/Optical Cable Assembly, 700 Series Controller	1	18B	1243510	Regenerant Refill Controller	
				19		Air Check Kit	1
					1032416	Air Check Kit 3/8-inch male	
					1032417	Air Check Kit 1/4-inch male	
				20	1235373	Module, Sensor, Photo Interrupter	1
				21	1235361	Motor w/Spacer & Pinion, 700 Series Controller, 12 V, 50/60 Hz	1
				22	1030502	Ball, Flow Control	1
				*	1033066	New to Old Style Aircheck Adapter	1

*Not Shown


Logix 700 Series Controllers Parts List

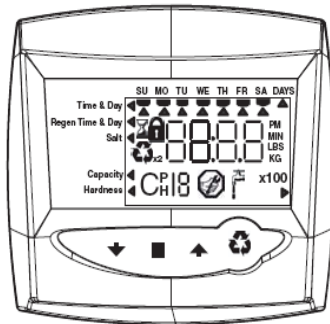

742/762 Control

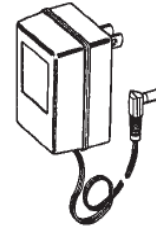

AC Adapter

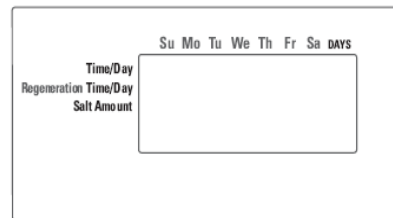

700 Control Overlays

Part				Part			
Code	No.	Description	Qty.	Code	No.	Description	Qty.
		Electronics Modules/Controllers	1			AC Adapter	
1242150		Logix 742 Controller		1000810		Japanese	
1242162		Logix 742 F Controller		1000811		North American	
1242168		Logix 762 Controller		1000812		Australian	
1242170		Logix 762F Controller		1000813		British	
		Electrical Components		1000814		European	
1235269		Motor/Optical Cable Assembly, 700 Series Control		1030234		Transformer Extension Cord 15 foot (4.5m)	
1235373		Module, Sensor, Photo Interrupter		1235448		North American Outdoor AC Adapter Overlays	
1235361		Motor w/Spacer & Pinion, 700 Series Controller 12V, 50/60 Hz		1238472		Overlay, 716 Controller, English	
1244336		Refill Sensor Probe for Salt Detector Applications		1238476		Overlay, 740C/742C Controller, English	
1256257		Remote Mount Kit					

Table of Contents

Page No.	Topic	Description
1	Model # and Packaging	Packaging Information
	Component Packaging Description	Packaging Description
2	Filter System	System Positioning
3	Filter Tank Loading	Filling with Media
	Logix 253/742 Control Valve	Attaching Valve to Tank
4	Logix 253/742 Control Valve, cont'd	Attaching Valve to Tank, cont'd
	Service & Drain Piping, General Installation Layout	Drain Piping
5	Service & Drain Piping, General Installation Layout, cont'd	Drain Piping, cont'd
6	System Schematic	Piping Layout
	Electrical Supply	Electrical Requirements
7	Electrical Supply, cont'd	Electrical Requirements, cont'd
7	Logix 253/742 Control Valve Electrical Connection	Instructions on Logix 742 Electrical Connection
7	Filling filter with Water	Details for Filling filter Tank with Water
8	Filling filter with Water, cont'd	Details for Filling filter Tank with Water, cont'd
8	Logix 253/742 Control Valve Timer	Instructions on Logix 742 Timer Settings
9	Logix 253/742 Control Valve Timer cont'd	Instructions on Logix 742 Timer Settings cont'd
9	Final Check	Final Installation Check
10	Final Check, cont'd	Final Installation Check, cont'd
11	Troubleshooting	Symptom / Cause / Solution
12	ERR Troubleshooting	Error Troubleshooting
13	253/742 Valve Body Schematic	Parts View
14	Valve Body Parts List	Part Numbers List
15	Valve Parts List	Part Numbers List
16	Warranty	Warranty