 


# IMPORTANT FILTER RECHARGING INSTRUCTIONS 6" FREEBOARD (based on 30% bed lift)

## **NS UNITS**


Units must be recharged with NS-Mix, a mixture of Calcite and Mag Oxide, to increase the pH of the water supply (Shipped in 50 lb. boxes)



### INSTRUCTIONS

- 1. Close inlet and outlet stop valves located on conditioner's service piping.
- 2. Press and hold the Regeneration button for 5 seconds until the drive motor starts. When the drive motor stops, the display will read "C1". At this point, unplug valve.
- 3. Remove dome plug located near the top of the tank. (See Drawing)
- 4. Use 5/8" siphon hose (provided with unit) to remove water from dome hole.
- 5. If a layer of dirt or oxidized iron is directly on top of mineral bed, try to remove with siphon hose or wet-dry vac.
- 6. Insert yard stick into dome hole and force through the bed. This will reduce the chance of channeling.
- 7. Insert funnel into dome hole and pour the neutralizing media into the tank until the filter bed is 7" below the dome hole.
- 8. Open theinlet stop valve and allow water to flow into the tank until the water level reaches the dome hole. Close inlet stop valve.
- 9. Be sure that the dome hole threads are clean. Replace the dome plug into dome hole and tighten.
- 10. Open inlet and outlet stop valves **slowly** to their maximum position.
- 11. Plug the valve back in. Press the Set button and UP arrow to advance the regeneration. The display will read "C2".
- 12. Press the Set button and UP arrow to advance the regeneration. The display will read "C3".
- 13. Press the Set button and UP arrow to advance the regeneration. The display will read "C7". The unit will now rinse.
- 14. Once the unit is done rinsing, it the display will read "C8". The unit will now go into brine refill.
- 15. Once the unit is done the brine refill cycle, it will advance to service. The display will read "C0".
- 16. To totally regenerate the unit, press and hold the UP and DOWN arrows for 3 seconds. Unit will now regenerate.

Recharging Neutralizers should be done between 6 months & 1 year.

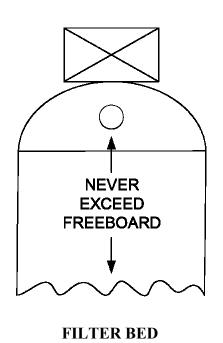


## IMPORTANT FILTER RECHARGING INSTRUCTIONS 6" FREEBOARD (based on 30% bed lift)

**MP-NS UNITS** 

Units must be recharged with NS-Mix, a mixture of Calcite and Mag Oxide, to increase the pH of the water supply (Shipped in 50 lb. boxes)
 
## INSTRUCTIONS



- 1. Close inlet and outlet stop valves located on conditioner's service piping.
- 2. Press and hold the Regeneration button for 5 seconds until the drive motor starts. When the drive motor stops, the display will read "C1". At this point, unplug valve.
- 3. Remove dome plug located near the top of the tank. (See Drawing)
- 4. Use 5/8" siphon hose (provided with unit) to remove water from dome hole.
- 5. If a layer of dirt or oxidized iron is directly on top of mineral bed, try to remove with siphon hose or wet-dry vac.
- 6. Insert yard stick into dome hole and force through the bed. This will reduce the chance of channeling.
- 7. Insert funnel into dome hole and pour the neutralizing media into the tank until the filter bed is 7" below the dome hole.
- 8. Open theinlet stop valve and allow water to flow into the tank until the water level reaches the dome hole. Close inlet stop valve.
- 9. Be sure that the dome hole threads are clean. Replace the dome plug into dome hole and tighten.
- 10. Open inlet and outlet stop valves **slowly** to their maximum position.
- 11. Plug the valve back in. Press the Set button and UP arrow to advance the regeneration. The display will read "C2".
- 12. Press the Set button and UP arrow to advance the regeneration. The display will read "C3".
- 13. Press the Set button and UP arrow to advance the regeneration. The display will read "C7". The unit will now rinse.
- 14. Once the unit is done rinsing, it the display will read "C8". The unit will now go into brine refill.
- 15. Once the unit is done the brine refill cycle, it will advance to service. The display will read "C0".
- 16. To totally regenerate the unit, press and hold the UP and DOWN arrows for 3 seconds. Unit will now regenerate.

Recharging Neutralizers should be done between 6 months & 1 year.