


# **IMPORTANT FILTER RECHARGING INSTRUCTIONS 9" FREEBOARD (based on 30% bed lift)**

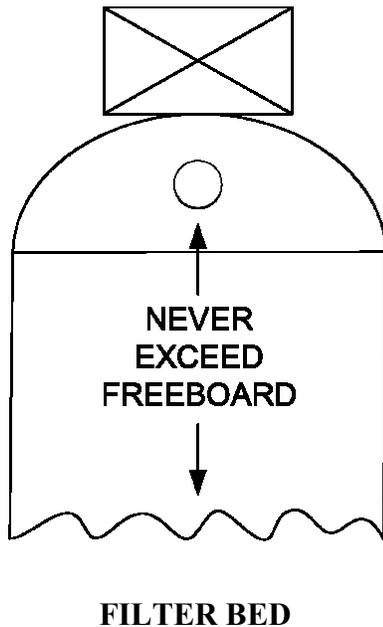

## **MUN-10/13 UNITS**


Units must be recharged with Calcite/NS-Mix (a mixture of Calcite and Mag Oxide), to increase the pH of the water supply  
(Shipped in 50 lb. boxes)

### **INSTRUCTIONS**

1. Close inlet and outlet valves, see installation schematic in system manual for reference.
2. Slowly loosen the dome plug. Note: Water pressure will be relieved. Once all water stops dripping from union, remove the dome plug.
3. Put syphon hose in dome hole & syphon water from tank.
4. Insert yard stick into dome hole and force through mineral bed. This will reduce the chance of channeling.
5. Insert funnel into dome hole and pour the media into the tank until the mineral bed is 14" below the dome hole.
6. Clean dome hole threads.
7. Connect the dome plug and tighten by turning clockwise, do not over tighten.
8. Open inlet and outlet valves fully.
9. Rinse system to remove media fines by opening the boiler drain with garden hose connected. Allow water to run until clear.
10. Close the boiler drain and unit is now in the SERVICE position.

**Recharging Neutralizers should be done between 6 months & 1 year.**

# IMPORTANT FILTER RECHARGING INSTRUCTIONS 13" FREEBOARD (based on 30% bed lift)

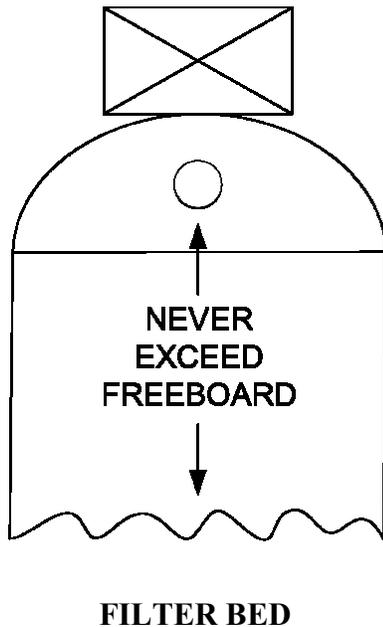

## MUN-1665 UNITS

Units must be recharged with Calcite/NS-Mix (a mixture of Calcite and Mag Oxide), to increase the pH of the water supply  
(Shipped in 50 lb. boxes)

### INSTRUCTIONS

1. Close inlet and outlet valves, see installation schematic in system manual for reference.
2. Slowly loosen the dome plug. Note: Water pressure will be relieved. Once all water stops dripping from union, remove the dome plug.
3. Put syphon hose in dome hole & syphon water from tank.
4. Insert yard stick into dome hole and force through mineral bed. This will reduce the chance of channeling.
5. Insert funnel into dome hole and pour the media into the tank until the mineral bed is 10" below the dome hole.
6. Clean dome hole threads.
7. Connect the dome plug and tighten by turning clockwise, do not over tighten.
8. Open inlet and outlet valves fully.
9. Rinse system to remove media fines by opening the boiler drain with garden hose connected. Allow water to run until clear.
10. Close the boiler drain and unit is now in the SERVICE position.

**Recharging Neutralizers should be done between 6 months & 1 year.**